



ROUSSELET
ROBATEL

CENTRIFUGAL HYDRO-EXTRACTORS

WITH INDIVIDUAL HEADS AND AUTOMATIC LOADING / UNLOADING
FOR SIMULTANEOUS PRE-DRYING OF PACKAGES AND CYLINDRICAL BOBBINS
AFTER DYEING



“BOBEX”




T
E
X
T
I
L
E

FEATURES :


- Rotation speed up to 7000 rpm.
- No distortion of bobbins and holders.
- No manual handling required for bobbin loading and unloading.
- Number of baskets according to the R.F dryer capacity.
- Removable liners to suit package or bobbin diameter.
- Vertical or horizontal package unloading position.

T5

OPERATING CYCLE :

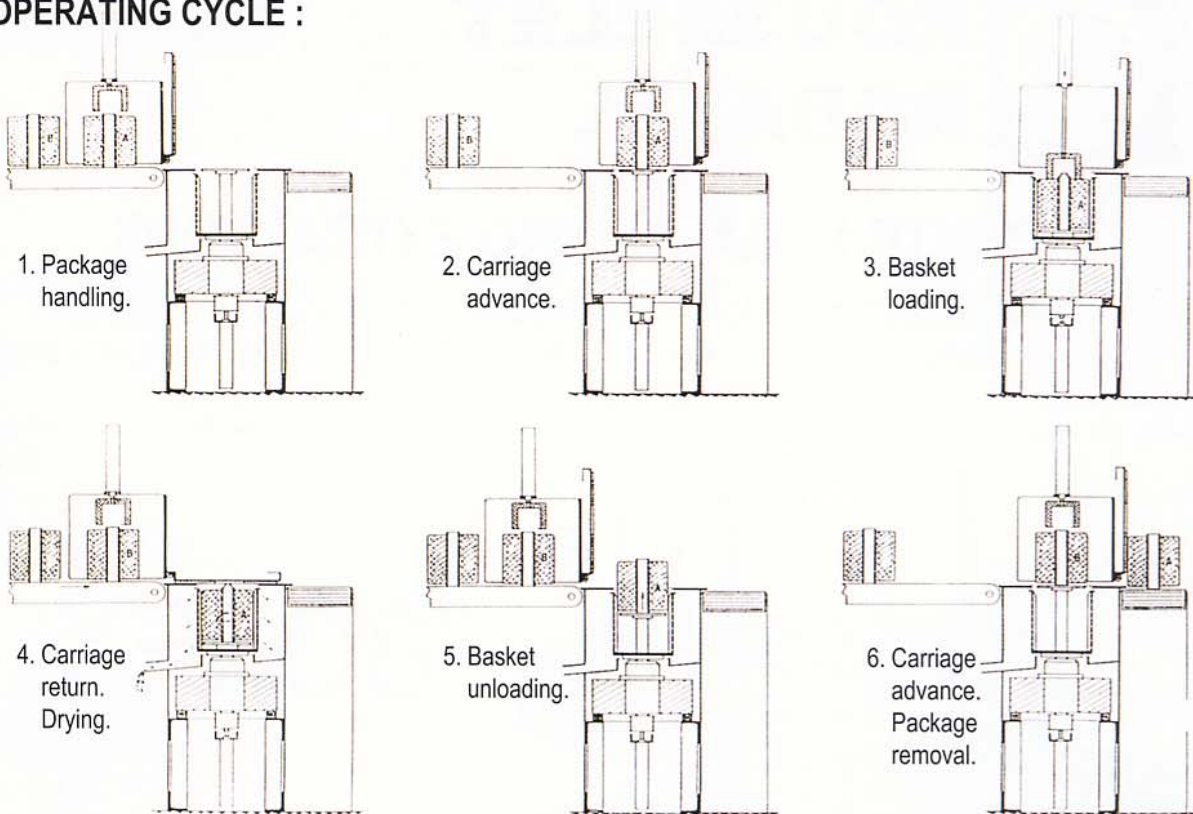

BOBEX centrifuge integration into a R.F drying line.

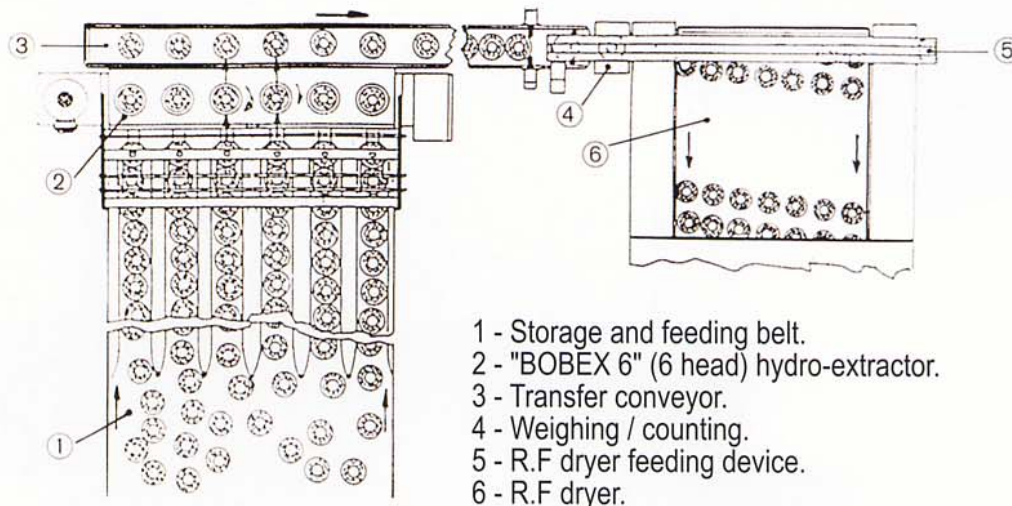

- 1 - Storage and feeding belt.
- 2 - "BOBEX 6" (6 head) hydro-extractor.
- 3 - Transfer conveyor.
- 4 - Weighing / counting.
- 5 - R.F dryer feeding device.
- 6 - R.F dryer.

As one of the world leaders in centrifugal extraction, Rousselet Robatel offers distinct ranges of centrifuges for various industries : textile, chemicals and pharmaceuticals, metal working, food industry...

ROUSSELET CENTRIFUGATION SA

Headquarters :

ROUSSELET CENTRIFUGATION SA

Great Britain :

ROUSSELET / ROBATEL U.K Ltd

Germany :

ROUSSELET CENTRIFUGATION

U.S.A. :

ROBATEL Inc.



Av. Rhin et Danube
PAE de Marenton
07104 ANNONAY - FRANCE

Parkside House, 17 East Parade
HARROGATE
NORTH YORKSHIRE HG 1 5LF

Hauptstraße 20
D 71093 WEIL IM SCHÖNBACH

703 West Housatonic Street
PITTSFIELD
MA 01201



+33 (0) 4 75 69 22 11

+44 (0) 1 423 530 093

+49 (0) 7157 62881

+1 413 499 4818



+33 (0) 4 75 67 69 80

+44 (0) 1 423 530 120

+49 (0) 7157 63232

+1 413 499 5648

E-mail rousselet.sa@rousselet.com

sales@rousselet_robatel.co.uk

rousselet@t-online.de

sales@robatel.com

Web www.rousselet.com